


Intelligent Security System


1. Security Mode
 - Switch off the engine lock.
 - Press  slightly before leaving the motorcycle.
 - Directional lamps will light once.
 - Warning alarm will sound "Bi" once.
 - Automatically in "Security Mode" after 3 seconds.

2. Pre-warning Status

Under the "Security Mode", the warning alarm will sound "Bi.....Bi....." for seven times if the motorcycle is switched on for the first time. Directional lamps will blink at the same time.


3. Emergency Status

Within 5 seconds of the "Pre-warning Status", if the engine lock was switched on again, the directional lamps will blink, and warning alarm will continuously sound for 20 seconds. The engine will be locked and the motorcycle cannot be started.


4. Energy Saving Security Mode
 - Switch off the engine lock.
 - Press  heavily before leaving the motorcycle.
 - Directional lamps will light once.
 - Warning alarm will sound "Bi" once.
 - Directional lamps will light once again.
 - Automatically enter Energy Saving Security Mode after 3 seconds.

5. In the Energy Saving Security Mode, if the engine is switched on, warning alarm will continuously sound for 10 seconds and the engine will be locked. The directional lamps will not blink for energy saving.


Anti-robbery System

1. If the motorcycle is driven away by force in road driving, the owner should press  on the remote control within 100 effective square meters.
2. The engine will automatically be switched off immediately.
3. The warning alarm will sound for 18 seconds and the directional lamps will continuously blink.
4. The engine will be locked and the motorcycle cannot be started.

Looking for motorcycle


1. Press  slightly.
2. Warning alarm will sound "Bi.....Bi....." for 4 times.
3. Directional lamps will blink at the same time.

Remote control start-up

1. Press the  twice continuously.
2. The engine of the motorcycle will start to function.
3. If the engine does not function due to cold weather or due to slow rotation of engine. Repeat step 1.

4. The motorcycle will be functional in normal driving mode.

Release all security modes

1. Under any security mode, press slightly the 
2. The warning alarm will “Bi.....Bi.....” twice.
3. Directional lamps will blink twice at the same time.
4. The motorcycle will resume normal function.

Installation Guide

Notes for installation:

1. Find the cables which are grouped inside a black tube, they are:
 - Cable of positive electric (anode) of the battery.
 - Cable of positive electric pass through the engine lock.
 - Cable of the off-ignition.
 - Cable of negative electric (earth).

2. Secondly, there will be another black tube consisted of cables of directional lamps and ignition. Use the "Schedule of Cable Connection" as a reference to connect the cables.

3. Cut the off-ignition cable into two parts: the one near the lock will be the upper part and the one remained will be the lower part. The two parts cannot be reversed (except for Suzuki, take reference of the Schedule of Cable Connection) in the connection cables.

4. Remote control start-up only works on motorcycle with automatic gearbox and the one that cannot be started in off gear position.
5. Main control's antenna neither connects to an electric source nor cut off.

Important Notes

1. Change the battery if the indication light of the remote control weaken or the effective control distance is short.
2. When the remote control is used to start the engine, the motorcycle engine lock should be switched off. Otherwise, the fuse will be broken.

Quality Assurance

1. There is a six-months maintenance service starting from the date of purchase.

Within this maintenance period, repairing service is free if this product is used under normal condition. The battery of the remote control and the warning speaker are not included.

2. The following cases will not be included under the service of maintenance:
 - Unauthorized deconstruction of the product.
 - Accidental damage to the product.

Common problems between the main body of the Alarm System and the Schedule of Cable Connection of the motorcycle

Cables of main body 9P	Function	Motorcycle Model		
		KYMCO.SYM	SUZUKI	YAMAHA
Red	Positive	Red	Red	Red
Orange	Electricity through engine lock	Black	Orange	Brown
Blue	Starter cable	Yellow / Red	Yellow / Green	Blue / White
Grey	Off-ignition of motorcycle	Black / White	Black / White	Black / White
Pink	Off-ignition of engine lock	Black / White	Black / Red	Black / White
Black	Earthing cable	Green	Black / White	Black
Yellow	Directional lamp	Light Blue	Black	Dark Brown
Yellow	Directional lamp	Orange	Dark Green	Dark Green

Schedule of Cable Connection

